


USING EXTREME DUTY PITMAN ARMS & SUPPORT BRACKETS

RP20609 / RP20610

The EXTREME DUTY pitman / idler arms are designed so no extra support is needed. However, if you would still like to use your existing support bracket with the EXTREME DUTY arms, we have included a washer kit to make that possible.

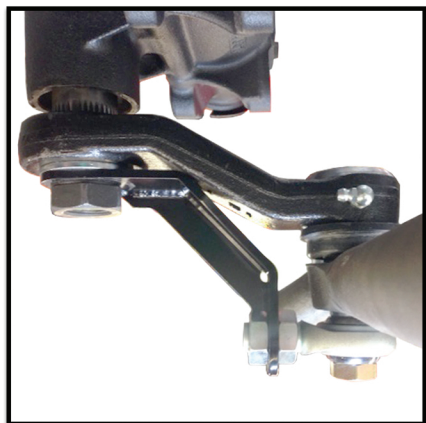


BELLVILLE WASHER



0.140" FLAT WASHER

To use pitman arm RP20609 and RP20610 with a support bracket kit:

Apply supplied blue thread locker to sector shaft threads.
Install supplied flat washer, support bracket, bellville washer, then nut as shown in FIG. A.

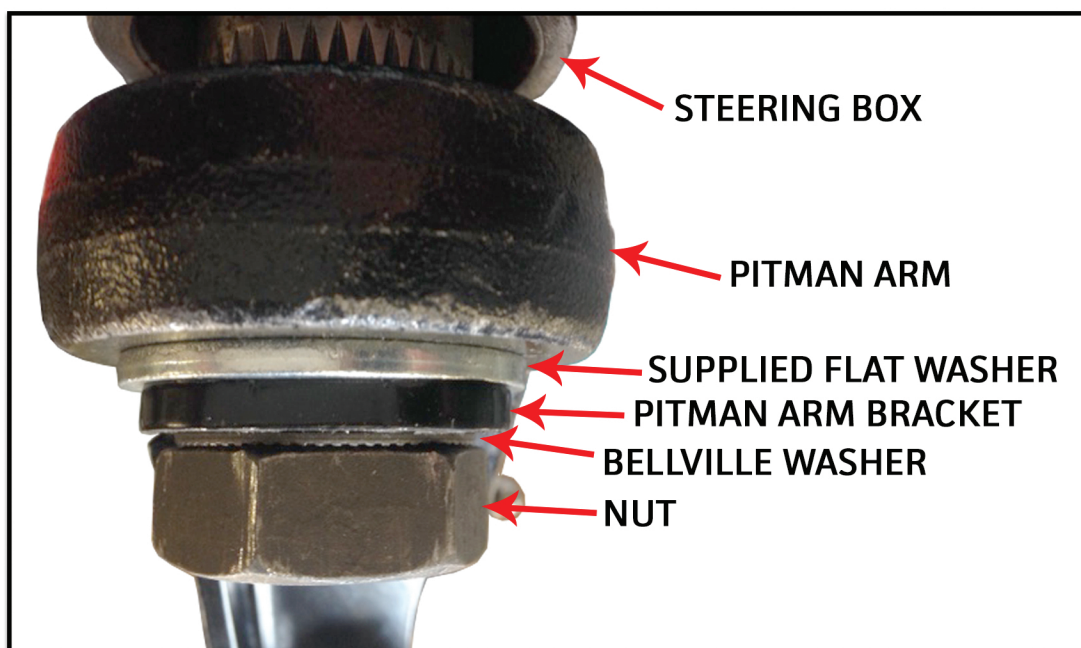

PITMAN ARM FIG. A

*****Extreme Idler Arm (RP20608) with support bracket does not require spacing***