

RP66583 INSTALLATION INSTRUCTIONS


3/4" TIE ROD ASSEMBLY LOCKOUT WASHER

CAUTION: This kit **must** be installed by a qualified mechanic, otherwise an unsafe vehicle and/or personal injury could result.



1. Remove supplied dust boot, and install RP66512 cartridge in the tie rod assembly forging. Discard boot.
2. Install steel heim lockout washer as shown in Figure B.
3. Install rubber seal with lip facing up as shown in figure C and D. It may be necessary to swivel the stud to allow the rubber to seat as shown in figure D.
4. Install misalignment washer as shown in figure E.
5. Repeat steps for the other side of the tie rod assembly, and assemble, and install.

**NOTE: FOR INSTALLATION ON TIE ROD ASSEMBLIES ONLY.
DO NOT INSTALL ON DRAG LINKS**

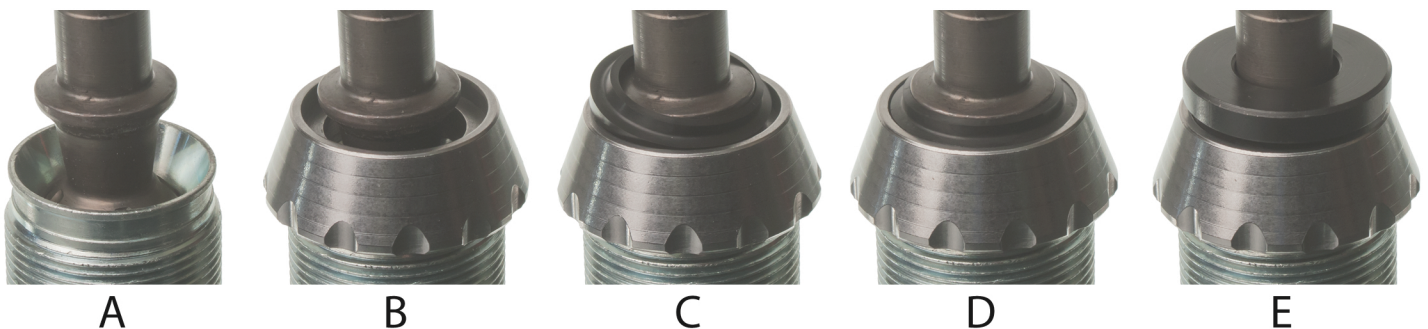

RARE
PARTS®
STEERING AND SUSPENSION